


<u>Part number:</u>	AB 6110
<u>Configuration:</u>	3/4" – 1" MNPT Integrated Chloride Ion Selective Sensor
<u>General Specifications:</u>	
<u>Concentration Range:</u>	1 to 10 <sup>-5</sup> Molar, 35,000 to 0.350 ppm
<u>Lowest Limit of Detection</u>	3X10 <sup>-6</sup> Molar, 0.105 ppm (105 ppb)
<u>pH Range:</u>	2 to 11
<u>Temperature Range:</u>	5 to 50 ° C
<u>Pressure Range:</u>	1 to 20 psig (6.9 to 138 kPag)
<u>Body Material:</u>	Ultem (Poly-Ether-Imide)
<u>Junction Material:</u>	Kynar (Poly-Vinylidene-Fluoride)
<u>Dimensions:</u>	Drawing <6-2>
<u>Cable:</u>	RG 174/U Coaxial (without preamplifier)
<u>Connector:</u>	BNC (unless otherwise specified)
<u>Ion Sensor Specifications:</u>	
<u>Measuring Membrane:</u>	Selective Chloride Sensitive Membrane (solid state)
<u>Dimensions:</u>	0.310, (7.8 mm) DIA
<u>Initial Impedance:</u>	Less than 100 M Ohms @ 25 ° C
<u>Interfering Ions:</u>	
<u>Given in Ratios of Permissible Excess:</u>	OH <sup>-</sup> (80), Br <sup>-</sup> (3X10 <sup>-3</sup> ), I <sup>-</sup> (5X10 <sup>-7</sup> ), S <sup>2-</sup> (Trace)
<u>Interfering Ion / Measured Ion (in Molarity)</u>	
<u>Reference System Specifications:</u>	
<u>Type:</u>	Double Junction
<u>Reference Half Cell:</u>	Ag/AgCl, Saturated KCl
<u>Primary Junction:</u>	Porous Ceramic, Saturated KCl in crosslinked polymer
<u>Secondary Junction:</u>	Porous Kynar, Saturated with KNO <sub>3</sub> in crosslinked polymer
<u>Surface Area:</u>	366,000 mil <sup>2</sup> , (236 mm <sup>2</sup> )
<u>Special Features:</u>	<p>Crosslinked polymer in the reference system is resistant to heat, solvents and to most chemicals. Sensor holds an excess of KNO<sub>3</sub>, assuring saturation at all temperatures and extending the life of the sensor.</p> <p>The ion sensitive part of the sensor is designed to resist the attack of acids, alkali and solvents used in chemical processes.</p> <p>The construction of the sensor permits easy access to the sensing and reference surfaces for cleaning or inspection.</p>
<u>Recommended Applications:</u>	Chloride ion concentration in aqueous solution from drinking water through waste water to industrial process solutions.
<u>Storage and Shelf Life:</u>	At room temperature with closed protector cap, 1 year from date of manufacture.
<u>Standard Hook-Up Options:</u>	No Preamp - BNC Connector + TC lead wires With Preamp – Multiconductor Lead Wires – See Hook Up Schematics

4 3 2 1

REVISIONS			
ZONE	REV	DESCRIPTION	DATE
2	1		

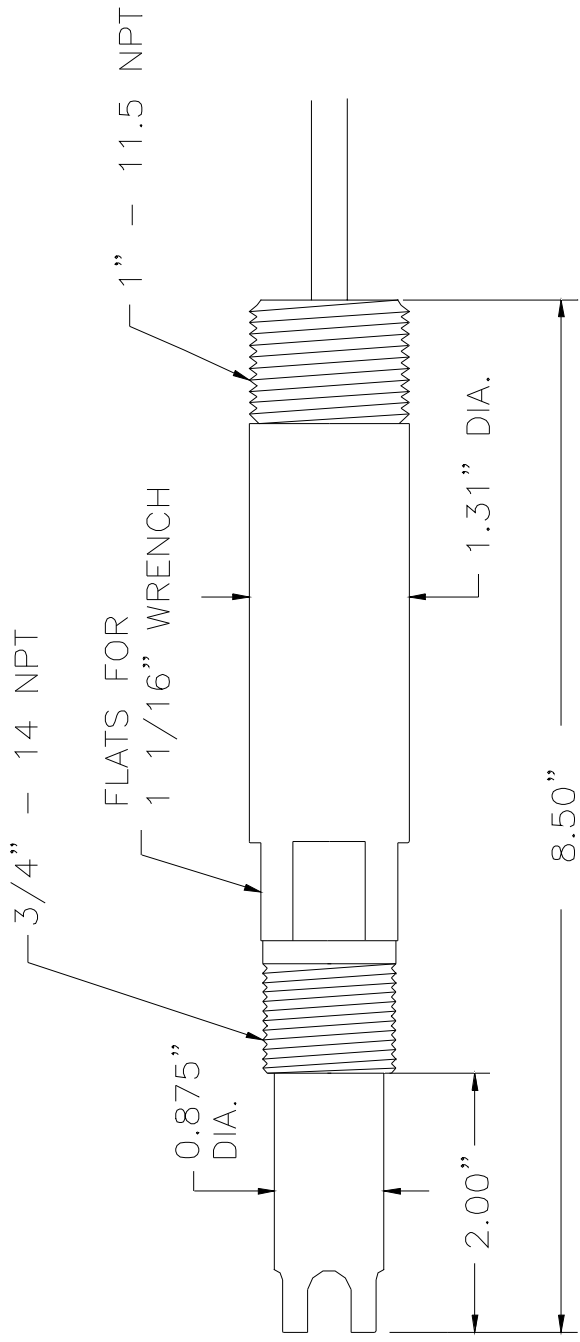

D C B A



ASTI Advanced Sensor Technologies, Inc.	
ION SELECTIVE SENSOR REF. DRAWING <6-2>	
SIZE 2	DWG NO. ASTIAB6-2.DWG
DIMENSION #<6-2>	REV 1
SCALE NONE	DATE: MARCH, 2003   SHEET 1 OF 1

4 3 2 1